



Prim-Jack

Parts List

Ref. #	Qty	Description
1	1	RACK / RAM ASSEMBLY
2	1	HOUSING
3	1	BASE
4	1	SHOE
5	1	GEAR SHAFT
6	1	GEAR SHAFT NUT
7	1	GEAR
8	1	RATCHET SPRING
9	1	RATCHET SHAFT
10	2	RH PAWL #1
11	2	LH PAWL #2
12	1	PAWL BUSHING
13	1	RH PAWL SPRING #1
14	1	LH PAWL SPRING #2
15	1	HANDLE YOKE
16	1	HANDLE SHAFT
17	1	KNOB
18	1	PAWL CLEVIS PIN
19	1	WASHER
20	1	STOP SCREW (1/4-20 X 1/2" ROUND HEAD)
21	1	COTTER PIN
22	6	M6-1.0 X 8MM SHCS
23	2	M6-1.0 X 15MM PHILLIPS HEAD SCREWS
24	1	LABEL
25	1	BASE PAD - SELF ADHESIVE, NON-MARRING
28	1	SHOE PAD - SELF ADHESIVE, NON-MARRING

